 


Banquet induction cooker

IHL-R14

Operating manual

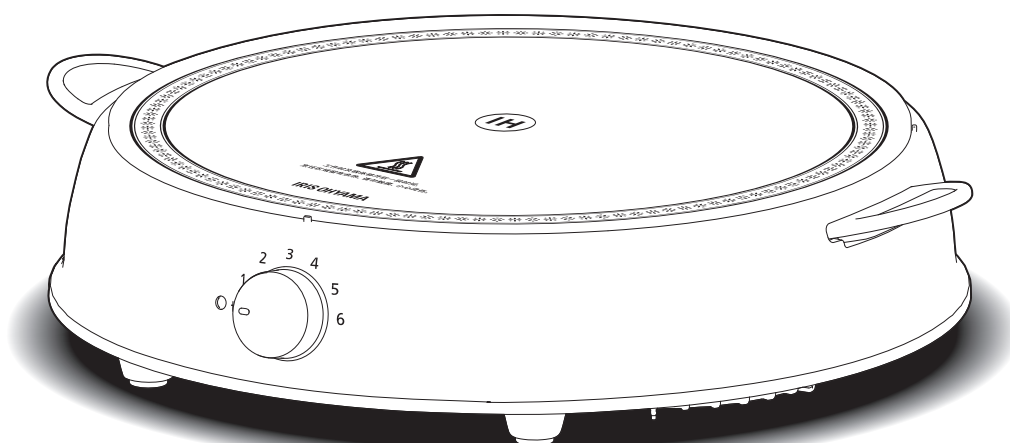

The product is only used in Hong Kong and Macau.
FOR USE IN HONG KONG AND MACAU ONLY

Warranty card attached

(Back cover)

Thank you for purchasing the product.

- Please read this manual carefully before use, so as to use the product properly.
- Please be sure to carefully read "safety precautions" before use.
- Be sure to request a warranty card from the store and confirm the date of purchase and the name of the store.
- Please properly keep this manual for use anytime in the future.

Catalogue

Preparation before use

Safety precautions	2
Precautions for use	5
Name of each component	6

Operation instruction

Before use	7
Operation instruction	9
Cleaning	9

Failure removal

Failure removal	10
Specifications	11
Warranty and after-sales service	11
Warranty card	Back cover

Safety precautions

Please be sure to carefully read and observe the following "safety precautions" before use, so as to avoid causing harm and bring unnecessary property damage to you and others.

The meaning of the sign



Refer to the contents needed to be noticed.



Indicate the content to be prohibited.



Refer to content must be executed.



Warning

Precaution upon death or serious injury caused by faulty operations.

Properly use the power plug, and power cord



Must be performed

- Clean the dust on the power plug regularly, so as to avoid bad insulation resulted from dust accumulation, and moisture; fire; as well as electric shock.
- Please be sure to insert the power plug in place, so as to avoid fire or electric shock resulted from short circuit.
- Power shall use sockets with AC 220V and rated value of over 10A alone, so as to avoid fire.



Pull off the plug

- When cleaning, overhauling or moving, be sure to remove the power plug out of the socket, so as to avoid electric shock and injury. Do not unplug the power plug while the cooling fan is running.



No wet hand

- Do not plug or unplug the power plug using wet hands, so as to avoid electric shock, scald or injury.




Prohibited

- Do not power on when the power cord is tied up, so as to avoid scald or fire resulted from overheating. Be sure to use the power cord with opening.
- Please do not damage power lines
- Do not pull the power cord when handling or gathering
Do not damage, process, bend with force, pull, and twist the power cord or use it to hang or hold heavy objects, so as to avoid fire and electric shock caused by the damages of power cords.
- Do not use broken power cords, power plugs, and loose sockets, so as to avoid fire or electric shock resulted from short circuit. When the power cord is damaged, contact the store or the Agents.
- Do not let the baby lick the power plug, so as to avoid injury or electric shock.



Prohibited

- Do not hit the top tray powerfully
Do not sit or drop items on the top tray, so as to avoid electric shock, fire and injury caused by cracks or ruptures of the top tray.

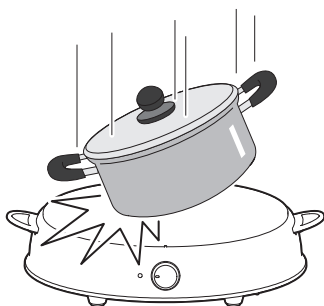

Must be performed

- When an error or failure occurs, stop using it immediately and unplug the power plug from the socket, so as to get rid of smoking, fire or electric shock.
(Abnormal example)
 - Abnormal sound or peculiar smell occurs
 - There is abnormal heating of power plug and power cord
 - When moving the power cord, the power is intermittent
 - Power failure always occurs in the course of using
 - When touching, there is feeling of numbness electric shock
- ➡ Please stop using it immediately and consult the store or the Agents where you buy products.




Prohibited

- Deep-frying cooking is banned, so as to avoid fire caused by over-high oil temperature.




Prohibited


- Do not place the product in children's reach or use it near pets, so as to avoid electric shock, scald and injury.

 **No contact with water**

- Don't drip water on the body
- Don't use water to clean the body

Thus, fire or electric shock resulted from power leakage or short circuit can be avoided.

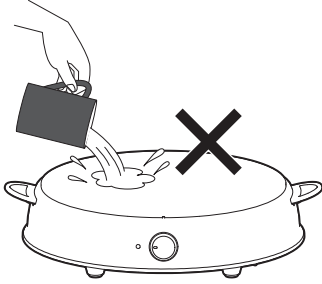


 **Prohibited**

- Do not carry other objects other than recommended pots on the top tray
- When heating a portable butane fuel stove, liquefied gas bottle, can, hot-water bag, battery, the packing of soft can, tinfoil pot, paper-based packaging with aluminum foil inside, metal spoon, pot cover and other items wrongly, fire, injury, scald and even explosion can be caused due to overheating.
- Do not place flammable items on or near the top tray, so as to get rid of fire and scald.


 **No disassembling**

- Do not disassemble, repair and modify The product by yourself, so as to avoid fire, electric shock and injury. For repair, please contact the store or the Agents.


 **Must be performed**

- **Warning:** If the surface is cracked, turn off the appliance to avoid possible shocks.


When heating soup and dishes, water, curry and other liquids,

 **Must be performed**

- reduce power and stir continuously, so as to get rid of scald and injury caused by soup with sudden boiling.

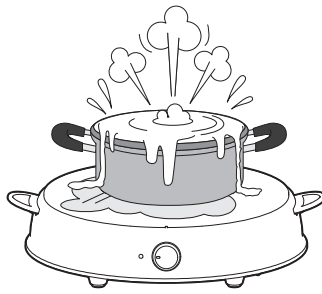


When cooking with fry or bake


 **Must be performed**

- Do not leave in the course of cooking
- Please reduce preheating fire to avoid excessive heating

Please pay attention to the fire due to less amount of oil used when cooking.


 **Prohibited**

- Do not put foreign matters such as pins or wires into the gap between the exhaust port, air suction port and product, so as to avoid fire, electric shock and injury.

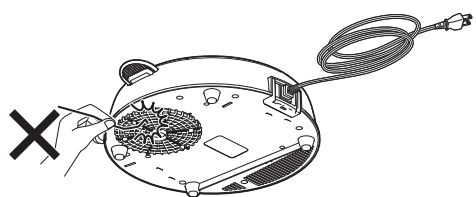



Attention


Precaution upon slight injury or product damage caused by faulty operations.

 **Pull off the plug**

- When unplugging the power plug, be sure to hold the power plug using hands and do not pull the power cord, so as to avoid electric shock, short circuit and fire caused by damages of power cords.
- Be sure to unplug power plug when you do not use it for a long time, so as to get rid of fire and electric shock due to insulation aging. Do not unplug the power plug while the cooling fan is running.

 **Prohibited**

- Do not make the easily magnetized items close to the product, so as to avoid eliminating information records about cash card, machine used commutation ticket of automatic ticket checking and cartridge tape due to magnetization, so as to avoid noise or sound with low volume of radio, television, and hearing aid due to magnetization.

 **Must be performed**

- If users using medical pacemakers need use the product, please consult a doctor, so as to get rid of influence on pacemakers due to magnetic line of force.

Safety precaution (continued)



Prohibited

- Do not lay paper, cloth or dust cover on the top tray of the induction cooker, so as to avoid overheating, failure, smoking and fire due to malfunction of a heater.



No touch

- Do not touch the high temperature section in the course of using and just using it, so as to avoid scald for touching the high temperature section. Clean the body thoroughly after cooling.



Prohibited

- Please do not use the product for purposes other than cooking, so as to avoid fire disaster and scald due to abnormal heating and abnormal action.
- Please do not use the product for purposes other than household
The product is designed as a household appliance. It may lead to fire if it's used for purposes other than household.



Prohibited

- Please do not obstruct the exhaust port or air suction port or use your hand, face or other items to approach the exhaust outlet or suction inlet, so as to avoid fire or scald due to internal overheating of the body.
Please make sure not to pave paper, tablecloth or other items under the air suction port. Please do not put seasoning and other items near the product.

About operation place



No contact with water

- Please do not use the product within water consumption sites or near fire sources, so as to avoid short circuit and electric shock.




Prohibited

- Please do not use the product on cushions which are not heatproof, to avoid fire.
- Please do not use the product on narrow canopy frames, so as to avoid fire and electric shock due to dampness of the power regulating knob and power cord.
- Please do not use the product in a site which is unsteady or slippery, so as to avoid scald and injury due to drop out.



Prohibited

- Please do not put the pot in unsteady places, so as to avoid scald and injury due to drop out or turnover of the top tray.

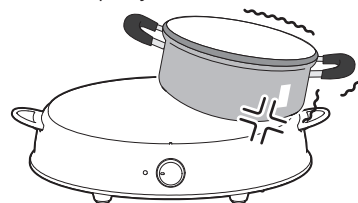

- Please do not move when the pot is on the induction cooker's top tray, so as to avoid scald and injury due to drop out of pots.




Must be performed

- In case that the power flexible line is damaged, replacement must be conducted by professionals assigned by manufacturer, maintenance department or similar departments to avoid risk.



Prohibited

- Please do not put the pot on the induction cooker under heating without anything in it, to avoid scald and fire due to overheating of the pot

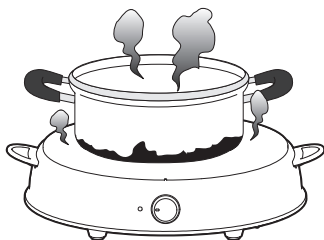

Precautions for use

- Do not use it on other induction cookers. Do not heat any other induction cookers or IH electric cookers on the product, so as to avoid malfunction and failure.
- Do not place radio, television, remote control, telephone and battery next to the product, so as to avoid malfunction and failure.

- Do not use items to hit the corner of the top tray, so as to avoid damages to the top tray.
- Please wipe up water attached outside of the pot and on the top tray before use, so as to avoid overheating or failure due to reduced efficiency of induction cooker.
- Please place the pot in the center of the top tray. Do not place it crossing other equipment or use pots exceeding the size of top tray, so as to avoid malfunction and failure.

- The adjustment of the firepower will be weakened due to different materials, shapes and thicknesses of the pot.
- The setting place of products will be hot due to hot gas exhausted at the back of exhaust ports.
- After finishing heating, operational sounds of fans can still be heard, which is not unusual. Cool the internal body through fans in the course of using or after using. Do not unplug the power plug until the fan stops running.

Fire of heaters

Fire display	1	2	3	4	5	6
Fire standard	Equivalent to about 150W	Equivalent to about 700W	About 1000W	About 1300W	About 1500W	About 2000W

About safety devices

- When an abnormality occurs during cooking, the indicator lamp and buzzer will notify and the heating will stop.


Safety devices	Contents
No pot measuring ability/ small object measuring ability	Indicator lamp for heating will flash or stop heating when using inapplicable pot to heat on the induction cooker; when heating without placing pot; place small objects such as spoon other than pot when heating.
Internal circuit Anti-overheating function	When internal temperature rises, sounds will be made by the buzzer, and the indicator lamp for heating will flash or stop heating. Please turn off the power, and use it again after cooling the body.
Top tray Anti-overheating function	The fire will be automatically adjusted when the pan base temperature rises, and if the temperature continuously raises, the buzzer will ring, the heating indicator lamp will blink and the heating will stop. Please turn off the power, and use it again after cooling the top tray.
Auto stop function	If there is no operation in 2h from the start of cooking, the buzzer will ring and the heating will stop.

Concept of IH heating

Feeding high-frequency current to the heating coil generates magnetic lines of force. When the magnetic lines of force pass through the pan base, eddy current will be generated in the interior of the pan. The eddy current flows and heats up the pan due to the resistance.


IH is the abbreviation of Induction Heating.

Therefore, there are adaptable pots and inadaptable pots for an induction cooker. (→P8)

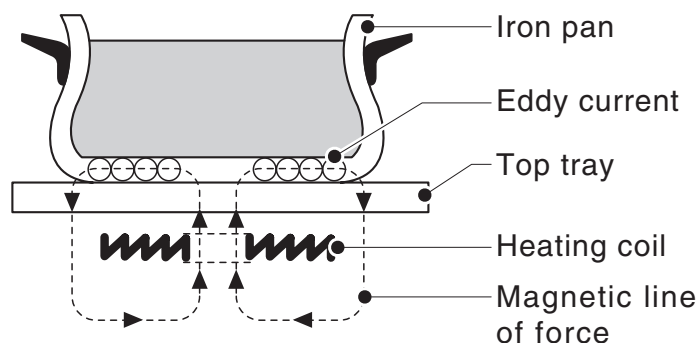


Name of parts

■ Front

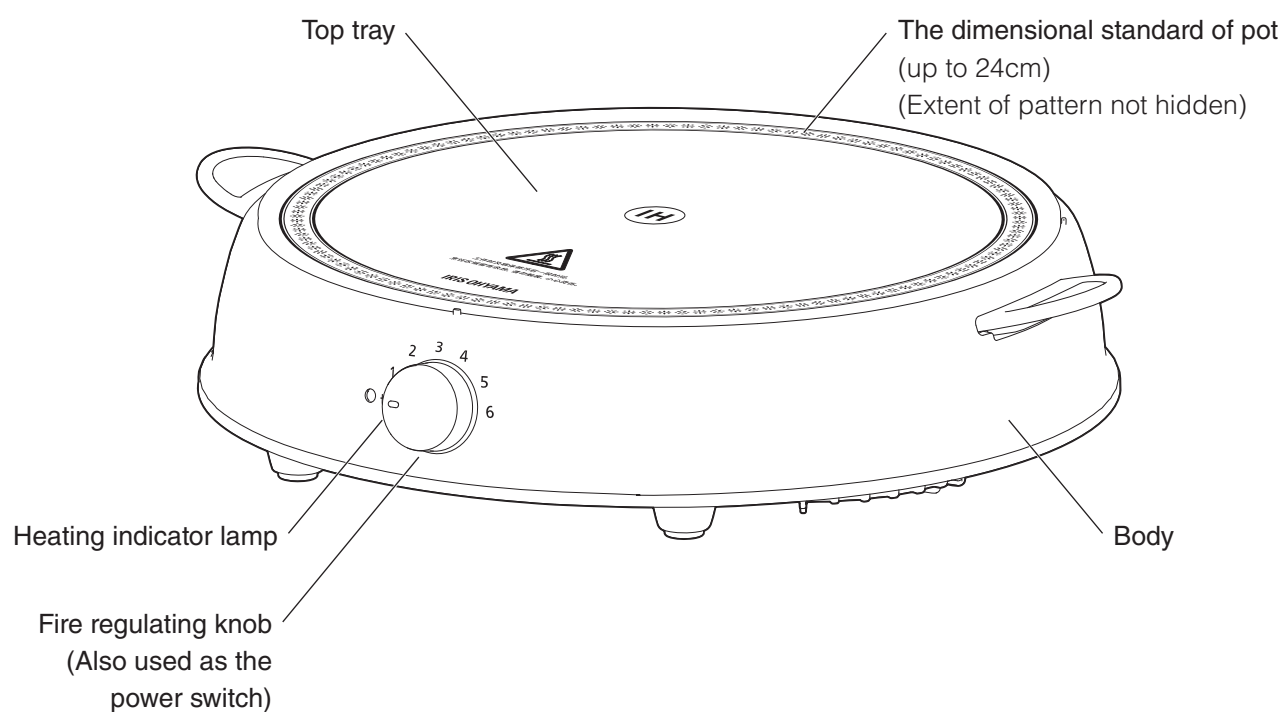

■ Undersurface

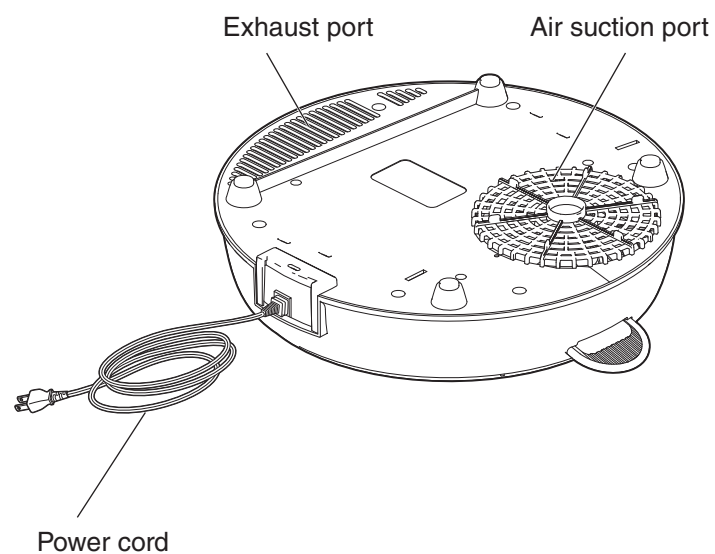


Before use

About operation place

Please keep the product from walls and furniture in a distance as shown in the Figure


- Product overheating or fire may happen if the product is used in narrow places. Please use the product in dry and ventilated places.

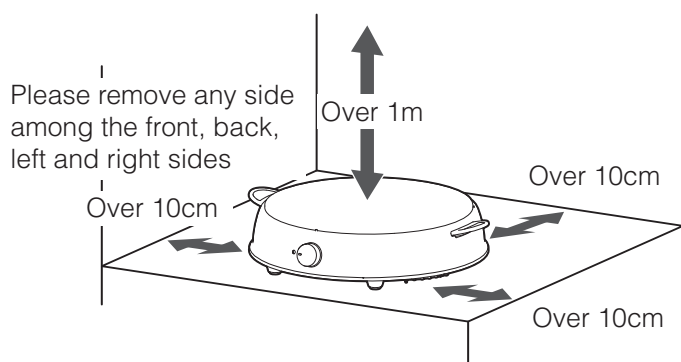


Identification of adaptable pot

1 Power cord connecting

- Before connecting the power cord, please verify if the fire regulating knob is switch to the **off** position.
- Please securely insert the power plug into the socket.

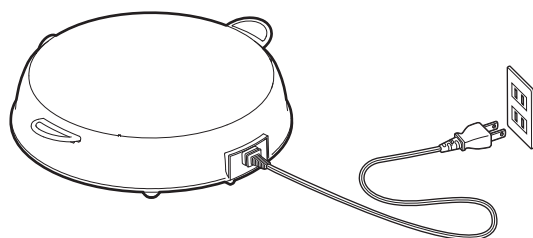



2 Please pour water into the pot and align it to the center of the top tray.

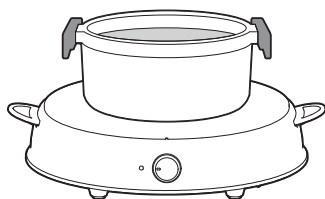


3 Rotate the fire regulating knob

- Please aim to any scale from 1-6

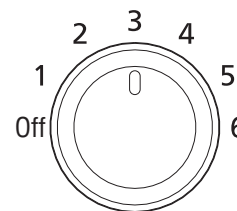


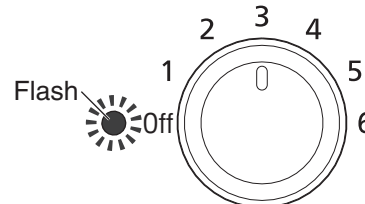 
 The heating indicator lamp will light up if adaptable pot is identified

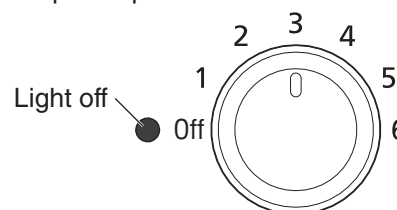

Please switch the fire regulating knob to "Off" immediately after identification to stop heating (The pot will be heated if the heating process continues.)

* The adjustment of the firepower will be weakened due to different materials, shapes and thicknesses of the applicable pot.

 The heating indicator lamp will light up if inadaptable pot is identified









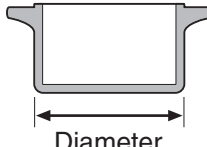
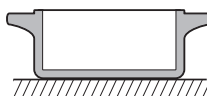
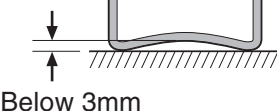
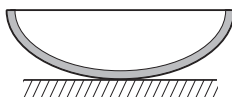
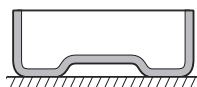
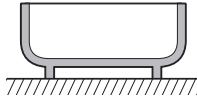
The pot can't be heated.

* Identification may not void if the top tray has residual heat. Please initiate identification after the top tray cools down.

Before use (continued)

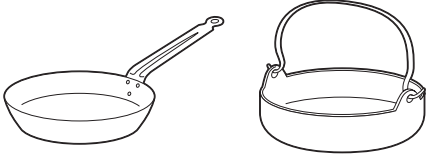■ Adaptable and inadaptable pots

There are adaptable and inadaptable pots for an induction cooker, in terms of material, size and shape.
For adaptable pot, we recommend the "ceramic cookware designed for IH" manufactured by Iris Ohyama.

	○ Adaptable pot	✕ Inadaptable pot
Material	<ul style="list-style-type: none"> Iron/cast iron  Cast iron enamel  Do not heat enamel pot without anything in it or burning, to avoid damage to the top tray due to burn-down of the cookware Stainless steel  18-0 (SUS430) and so on * There are inadaptable pots or fire weakens due to varied types. Multi-layer steel pot * Some pots are not adaptable due to varied types. 	<ul style="list-style-type: none"> Heatproof glass  Chinaaware/earthenware cooking pot  Even identified with "Designed for IH", earthenware cooking pots available on the market are still inadaptable. It is to avoid identification failure or inefficient heating. Aluminum/bronze  Even identified with "Designed for IH", aluminum foil pots available on the market are still inadaptable, It is to avoid identification failure or inefficient heating.
Size	<ul style="list-style-type: none"> Pot with diameter from 12-24cm  Diameter 	<ul style="list-style-type: none"> Pot with diameter less than 12cm Pot with diameter over 24cm Pot beyond the dimension of top tray
Shape	<ul style="list-style-type: none"> Pot with flat base  Flat Pot with base curvature less than 3mm  Below 3mm 	<ul style="list-style-type: none"> Pot with round base (woks, etc.)  Pot with layered base which can't attach to the top tray  Pot with supports 

* The adjustment of the firepower will be weakened due to different materials, shapes and thicknesses of the applicable pot.

* During cooking, the base of pot may distort if it's thin. Please do not use it once it's distorted.

Operation instruction




Warning

- Please do not use the product for deep-frying cooking, so as to avoid fire caused by over-high oil temperature.

1


Power cord connecting

- Before connecting the power cord, please verify if the fire regulating knob is switch to the **off** position.
- Please securely insert the power plug into the socket.

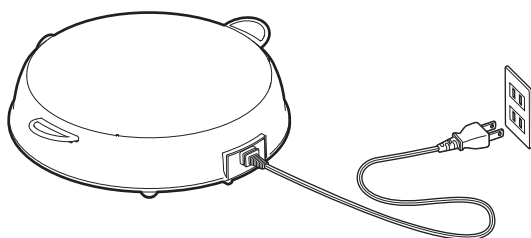

2

Please pour materials into the pot and align it to the center of the top tray.

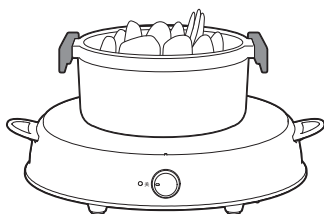


* Please use pot with appropriate materials, sizes and shapes. (→P8)

3

Rotate the fire regulating knob to regulate the fire

- The heating process starts once the heating indicator lamp lights up

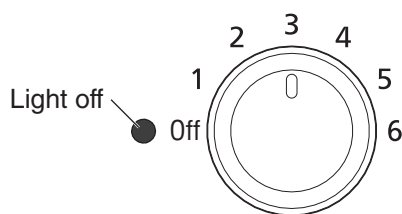


* If there is no operation in 2h during the heating process, the buzzer will ring and the heating process will automatically cease. (Heating indicator lamp becomes off.) If the cooking time exceeds 2h, you need to restart.

4

When the cooking is over, please switch the fire regulating knob to "Off"

- When the cooking is over, the heating indicator lamp will become off.

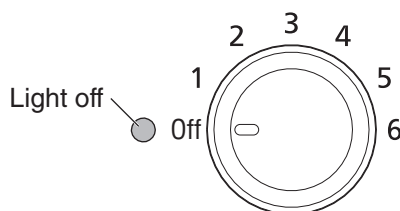

- When the fire regulating knob is not switched to "Off", the heating will not start even if the power cord is connected.
- When the cooking is over, the cooling fan will continue to run if the internal temperature is high. Do not unplug the power plug until the fan stops running.



Attention

- Please avoid being scalded by the top tray.

Clean



Attention

- Please clean the product after the power is switched off, the power cord is disconnected and the main body cools down.
- Please do not clean by water.

Main body and top tray

Please wipe it using a dry cloth which is completely wrung-out


- Upon cleaning, please dip a dry cloth with diluted neutral detergent and wipe out the cloth, and then use the wrung-out cloth to wipe the product.
- If the stains on the top tray are hard to be removed, please use slight liquid cleanser to wipe the top tray.



Air suction port and exhaust port

Turn over the induction cooker, and remove the dust using dust collector

* Failure or overheating may be consequential if the product is used with attached dusts.

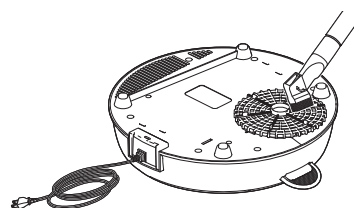

- Please do not use xina water, gasoline, acid or alkaline detergent, decolorizer, and domestic synthetic detergent.
- Please apply abrasive powder or scrubbing brush to the parts other than the top tray.
- Please clean the top tray after each use, so as to avoid deformation and stickiness due to smudginess.

Failure removal

Please read this manual in details before sending the product for repair, and check whether the abnormality is caused by any of the following circumstances.

Common failures	Reason	Solution
No response from the knob	<ul style="list-style-type: none"> Power plug is not securely plugged into the socket 	<ul style="list-style-type: none"> Please securely insert the power plug into the socket.
The induction cooker will give out sound of "buzz" or "spurt" during cooking	<ul style="list-style-type: none"> "Buzz" is the sound given out by the cooling fan "Spurt" is the vibration noise due to varied types of pot, 	<ul style="list-style-type: none"> which is not unusual. Please don't worry. which is not unusual. Reposition the pot or replace it, the noise will disappear.
After the cooking is over, the working noise of the cooling fan can still be heard	<ul style="list-style-type: none"> High internal temperature of the main body 	<ul style="list-style-type: none"> When the internal temperature of the main body is high, the cooking fan will continue to operate for the purpose of cooling. The cooling fan will automatically cease after the main body is cooled.
The breaker is disconnected from power supply during use	<ul style="list-style-type: none"> The available power capacity is exceeded 	<ul style="list-style-type: none"> Shut down other appliances or connect to the circuit of another circuit, and please do not exceed the capacity of the power circuit.
The buzzer rings and the heating ceases during cooking (heating indicator lamp becomes off)	<ul style="list-style-type: none"> If there is no operation in 2h during the heating process, the heating process will automatically cease (auto stop function) 	<ul style="list-style-type: none"> If the cooking time exceeds 2h, please switch the fire regulating knob to "Off" , and then regulate the power again.
Weak fire		<ul style="list-style-type: none"> In case of excessive preheating time or excessive base temperature, the fire will be automatically regulated. The fire will be automatically restored if the temperature drops.
Heating failure (buzzer rings, and heating indicator lamp flashes)	<ul style="list-style-type: none"> Top tray overheat protection device is activated 	<ul style="list-style-type: none"> When temperature of the bottom of a pan rises, sounds will be made by the buzzer, and the indicator lamp for heating will be flashed or stopped heating. At this point, please do not use it until the top tray cools down.
Heating failure (heating indicator lamp flashing)	<ul style="list-style-type: none"> No pot on the induction cooker Inadaptable pot or small part is placed on the induction cooker The position of pot deviates from the center of the heater 	<ul style="list-style-type: none"> Please place adaptable pot onto the center of the heater, and then please rearrange it. (→P8)
Heating failure (repeated buzzer ringing and repeated three times heating indicator lamp flashing)	<ul style="list-style-type: none"> Internal circuit overheat protection device is activated Internal circuit abnormality detected 	<ul style="list-style-type: none"> Please switch the fire regulating knob to "Off" , and do not use it until the main body cools down. Please unplug the power cord, and reconnect.
Heating failure (heating indicator lamp not on)	<ul style="list-style-type: none"> Before connecting the power plug, fire regulating knob does not in the position of "Off" 	<ul style="list-style-type: none"> First switch the fire regulating knob to "Off" , and then reregulate the power.

Heating failure
(repeated buzzer
ringing and repeated
twice heating indicator
lamp flashing)



- Abnormal voltage detected



- First unplug the power plug, and apply it to a separate socket.

If the failure still can't be eliminated,
please contact the store or the Agents.



Warning

- Please do not privately dismantle, repair and modify the product.

Specifications

Power	220V-50Hz
Rated power consumption	2,000W
Heater	IH heater 2,000W
Fire regulation	Gear 6 (fire) is equal to about 150W-; about 2000W
Product dimension (excluding power cord) (about)	W349×D320×H76mm
Weight (including power cord) (about)	1.9kg
Power cord length (about)	1.3m

* Specifications are subject to change without prior notice.

* Executive standard: 3C certification standard GB4706.1-2005 and GB4706.29-2008, energy efficiency standard: GB21456-2014

Warranty and after-sales service

Please make sure to read the following content in details.

■ Warranty card

Please ask the store to provide you with a warranty card and make sure all relevant columns on the card are completed.

If you don't present the warranty card, you will have to pay for relevant repair costs, so please keep proper custody of the warranty card

■ Within warranty period

Warranty period: the term specified on the warranty card (back cover)

If any failure during the warranty period occurs, we will provide free repair as per the "Warranty Regulations".

■ Out of the warranty period

Please consult the store from which you purchase the product or the Agents, and you need to pay for relevant repair costs.

■ About availability period of parts

After withdrawal of our relevant products from the market, the availability period of major parts is three years.

Major parts refer to those parts necessary to maintain the product functions.

■ About after-sales service

For other matters regarding after-sales service not specified herein, please consult the store from which you purchase the product or the Agents.

Abandon

- With regards to the disposal of the product and packing materials, please follow the local regulations.

Banquet induction cooker IHL-R14

Warranty card

The warranty card is valid from the date of purchase till the following expiry date, during which free repair can be provided as per the following Warranty Regulations if there is any failure occurring.

Date of purchase * MM/DD/YYYY		Warranty period Since the date of purchase: 1 year * Other than accessory and consumables	
Customer	me		*Store Address and store name Telephone () -
	Address Postal code		
	Telephone () -		

Notice for store: Please complete the columns with * and then issue the card to the customer

Warranty Regulations

- 1 Failures or damages incurred under normal operating status to the extent of precautions set out in the operating manual and labels on the product, we will provide free repair or replacement without charge.
- 2 If free repair service is required due to failures within the warranty period, please present the warranty card to the store for repair.
- 3 The scope of warranty is only limited to the free maintenance of the product alone. Even if within the warranty period, no other services will be available other than the free repair or replacement.
- 4 If the store registered on the warranty card can't be commissioned due to relocation or other reasons, please consult the Agents.
- 5 Relevant repair costs must be paid within the warranty period in case of the following circumstance.
 - ① Failure and damage due to misuse or private repair
 - ② Failure and damage due to product drop out
 - ③ Failure and damage due to fire, earthquake or other natural disasters
 - ④ Failure and damage due to purposes other than household (e.g. prolonged industrial use, used in vehicles and ships, etc.)
 - ⑤ Failure and damage due to handling and transport of the product
 - ⑥ The warranty card can't be presented
 - ⑦ Date of purchase, customer name, store name or other items on the warranty card are not available on the warranty card, or the same is smeared
- 6 The warranty card is only valid in Hong Kong and Macau
- 7 The warranty card is unique (only 1 is available), please make sure to keep it properly

Warranty memorandum

* The warranty card is the evidence of free repair or replacement under the term and conditions specified on the warranty card. The warranty card however doesn't restrain the customer's other legal rights entitled by the company issuing the warranty card or other business entities. For repair and other matters beyond the warranty period, please consult the store from which you purchase the product or the Agents.
* For repair and the availability period of parts beyond the warranty period, please read the "Warranty and After-sales Service" in details.

IRIS OHYAMA 株式会社

香港及澳門地區總代理：
環商國際(香港)有限公司
網 址: www.globiz.com.hk
電 郵: info@globiz.com.hk
電 話: 852-53382408